



1 Example 1 - Section
1.0 Perimeter Board Attachment to CE Ceiling Panel Scale: 3" = 1' 0"

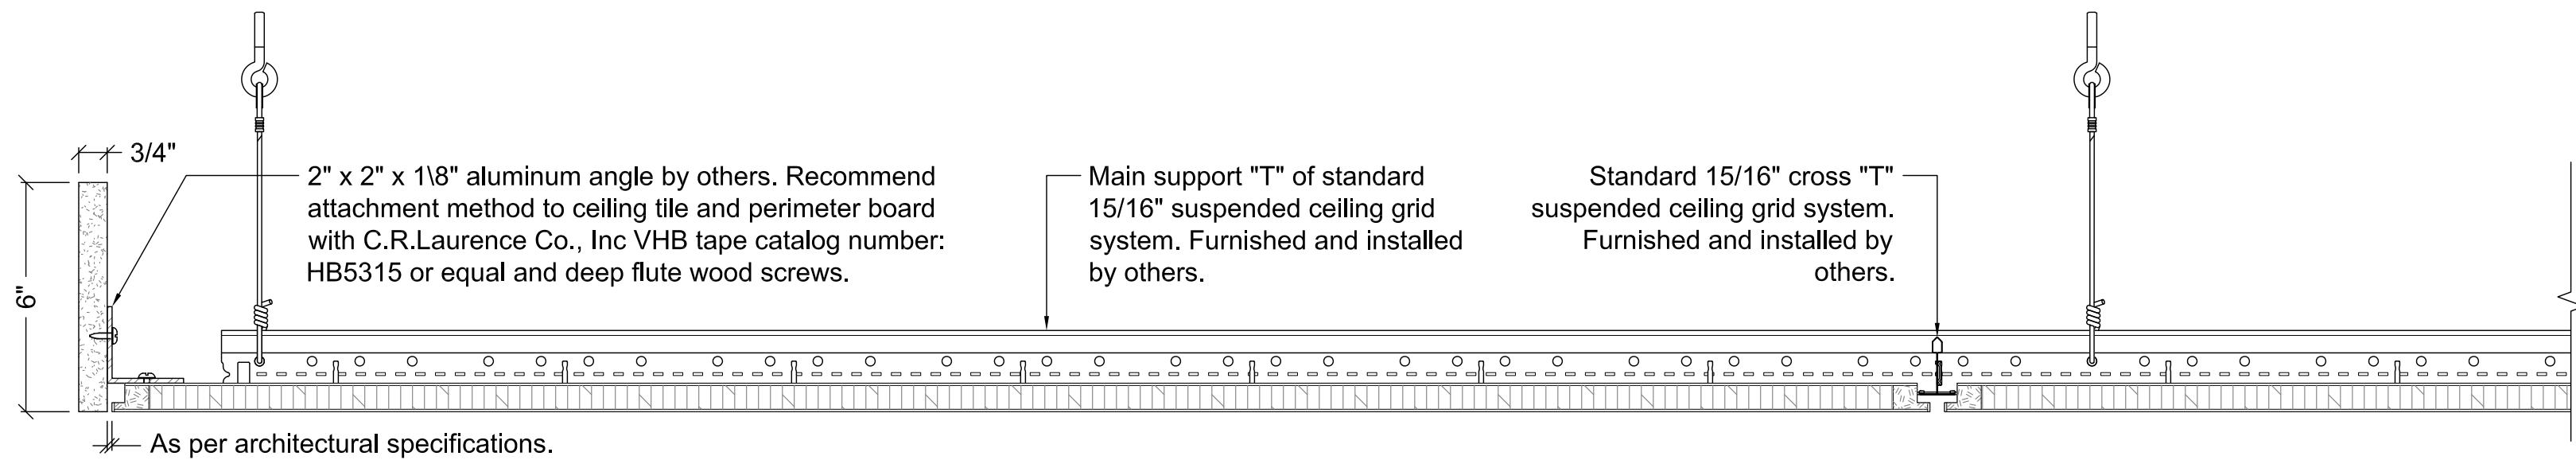

2 Example 2 - Section
1.0 Perimeter Board Attachment to CE Ceiling Panel Scale: 3" = 1' 0"

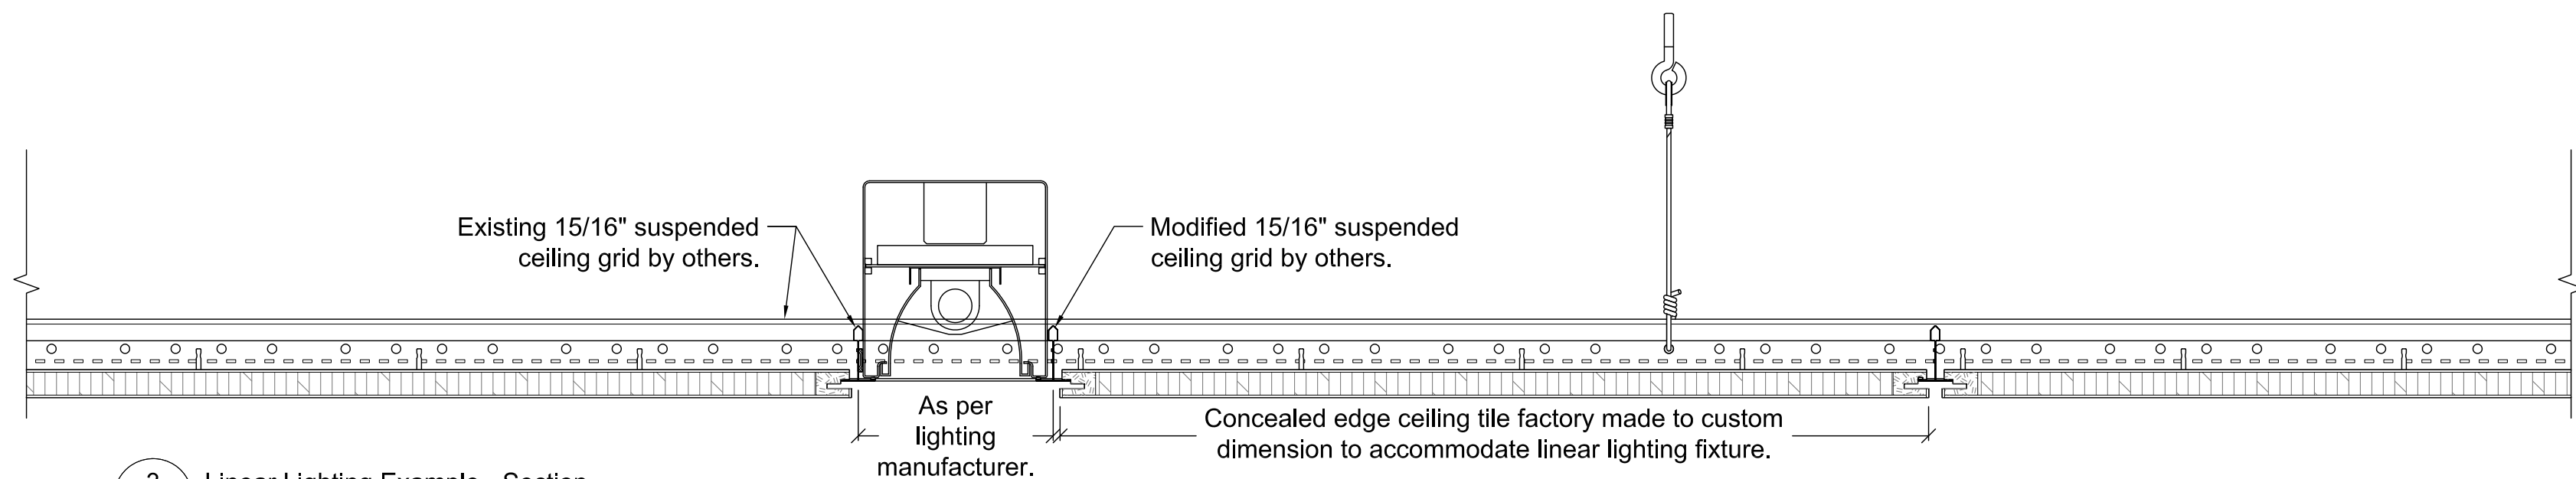

3 Linear Lighting Example - Section
1.0 With Concealed Edge Ceiling Panel Scale: 3" = 1' 0"

These drawings show typical conditions in which the Richter Furniertechnik GmbH & Co. product depicted is installed. They are not a substitute for an architect's or engineer's plan and do not reflect the unique requirements of local building codes, laws, statutes, ordinances, rules and regulations (Legal Requirements) that may be applicable for a particular installation. Richter Furniertechnik GmbH & Co. KG and/or Richter USA, Inc. do not warrant, and assumes no liability for the accuracy or completeness of the drawings for a particular installation or their fitness for a particular purpose. The user is advised to consult with a duly licensed architect or engineer in the particular locale of the installation to assure compliance with all Legal Requirements. Richter Furniertechnik GmbH & Co. KG and/or Richter USA, Inc. are not licensed to provide professional architecture or engineering services.

Approved. No exceptions. Approved as noted.
Revise and resubmit.

Signature: _____ Date: _____

Richter Sordino Acoustic Ceiling Tiles

Sections - Suggested Perimeter Board Installation Methods.
Section - Linear Lighting Accommodations

Revisions:
△
△
△
△

Drawn By:
D. Novic

Date:

Scale:
3" = 1' 0"

Sheet No.
1.0